


CHOOSE ENTRANCE LAYOUT

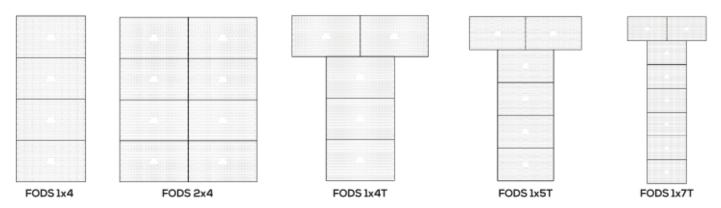

For unique or custom installation layouts, please contact our JWA team on 1800 264 628.

CHOOSE ANCHOR TYPE





Installing On Grade, Dirt, or Sand Round Head Stakes Concrete Form Stakes w/ Pin & Washer

Installing On Concrete or Asphalt Concrete Screw Anchors Expandable Sleeve Anchors

Recommended Tooling		
Stake Anchors*	Screw Anchors	Sleeve Anchors
Concrete Rotary Hammer Drill	Concrete Rotary Hammer Drill	Concrete Rotary Hammer Drill
3/4" Drill Bit	3/4" Concrete Drill Bit	3/4" Concrete Drill Bit
Sledge Hammer	Impact Driver	Impact Driver
Pins and Washers*	1-1/8" Socket	15/16" Socket
		Sledge Hammer

Recommended 4 anchors per mat based on substrate.

^{*}Pins and washers are required when using concrete form stakes.





MAINTENANCE

To ensure continued performance, FODS mats should be regularly inspected and maintained. Mats should be cleaned before voids between the pyramids fill up with sediment above the base of the mat. In most cases, the existing street sweeping process can be used to clean the mats. Commonly a street sweeper or skid steer with a broom attachment are used. Adjustable heads on the street sweepers may be required to effectively remove sediment from between pyramids.

A FODS shovel is also available for manual cleaning. The FODS shovel is shaped to fit between between pyramids which are aligned in rows.













MORE RESOURCES

Visit www.fods.com.au/installation to watch a video of the installation process and access more information on FODS Reusable Construction Entrance, including Technical Data Sheets.





JWA Oilfield Supplies 35 Griffin Cres BRENDALE QLD 4500

1800 BOGMATS | 1800 264 628 trackoutcontrol@fods.com.au www.fods.com.au